



Figure 1A

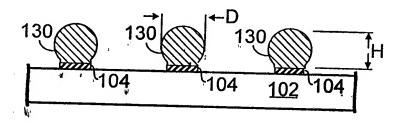

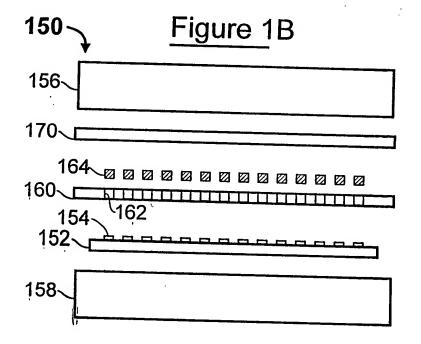

200 \ Figure 2A




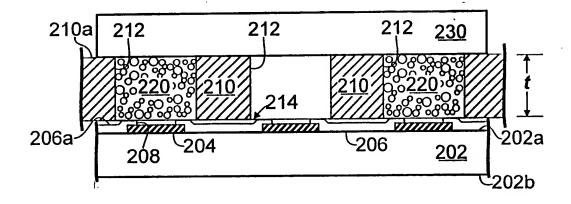



Figure 2B


250

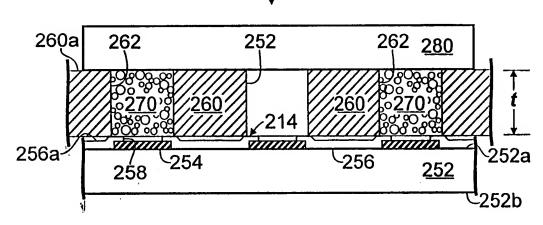


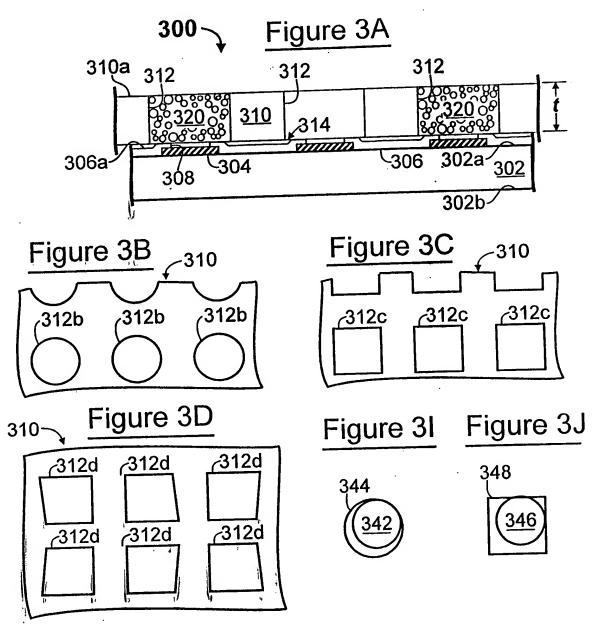

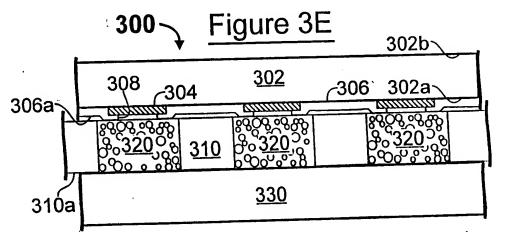


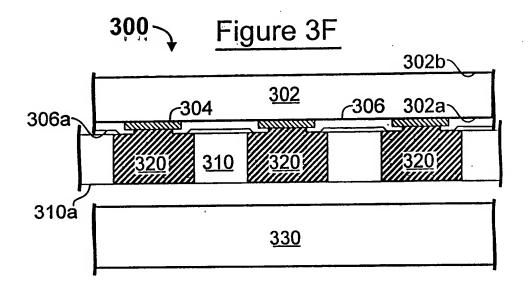


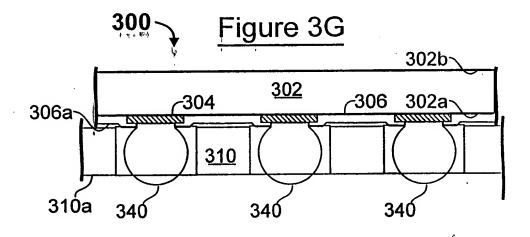


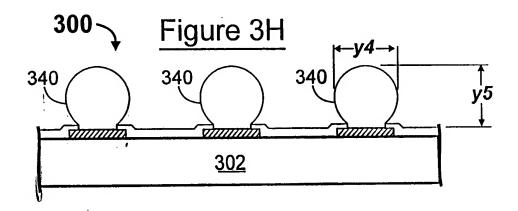



400 Figure 4

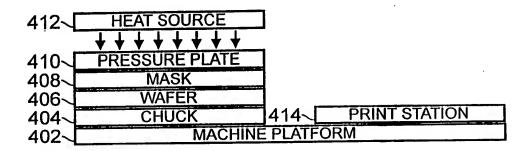

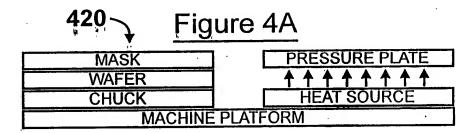

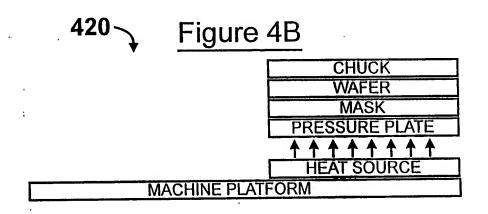

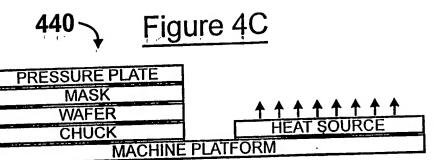

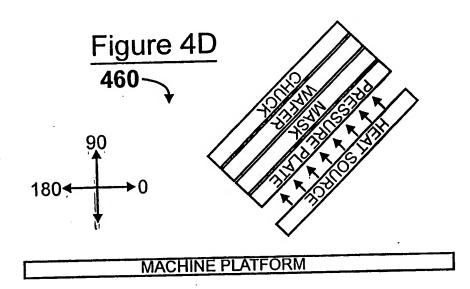

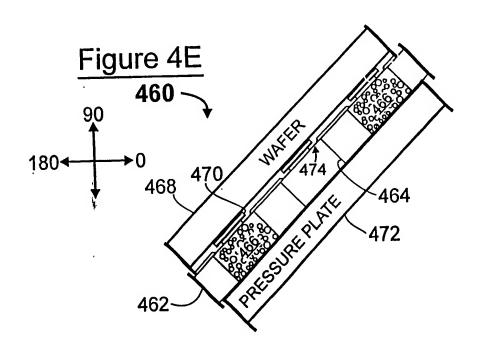
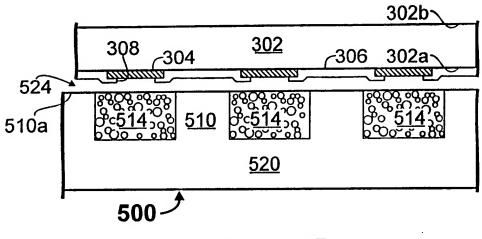
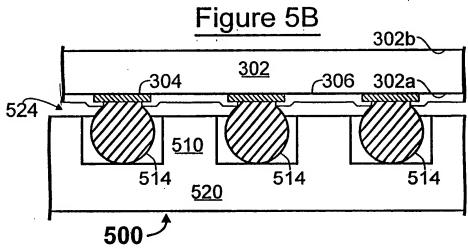


Figure 5A





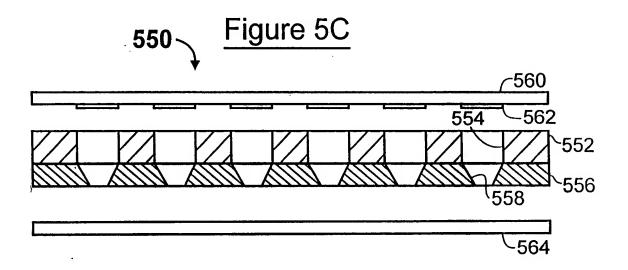
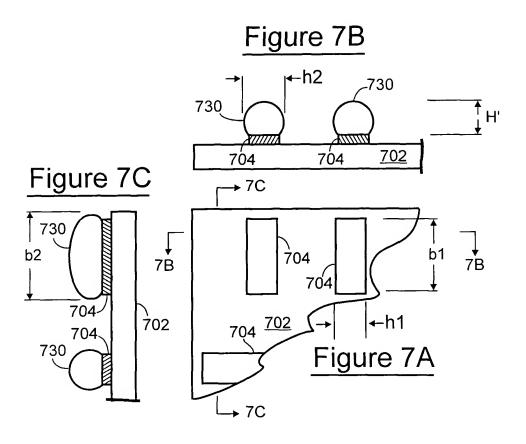
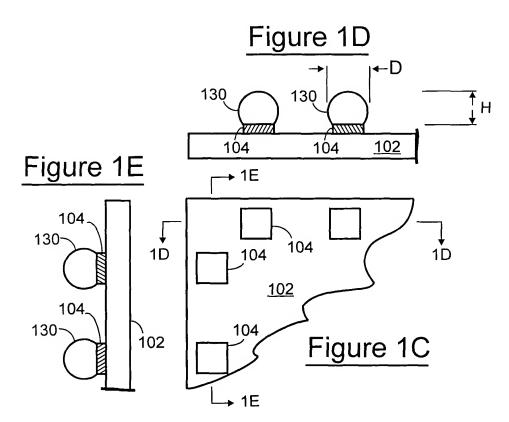


Figure 6A -D 630 630 630 H1 Step 1 604 604 604 bump 602 Figure 6B 640 H2 > H1 630 Step 2 encapsulate 604 602 (overmold) Figure 6C 630a 630a 640a 630a Step 3 lap 602 604 630 Figure 6D 650 650 650 H5 > H1, H2 H5 ~ 2 x H1 Step 4 bump, again 604 602 <u>630</u>





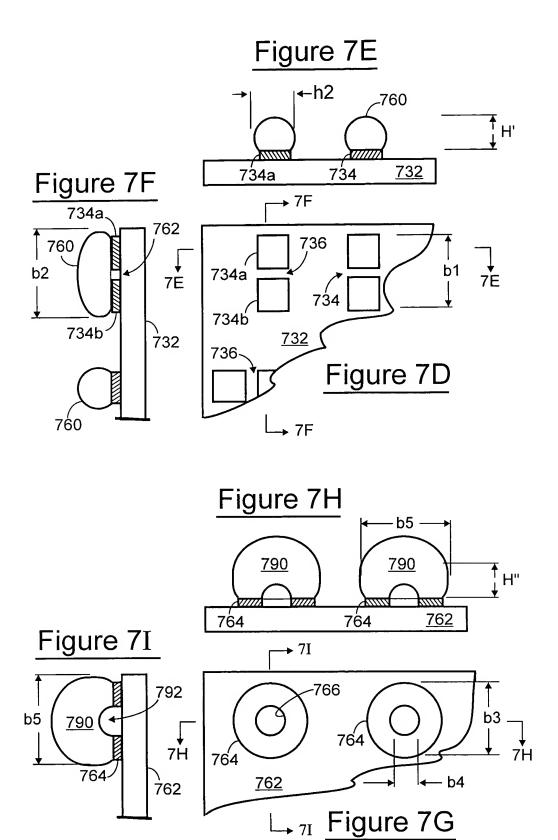
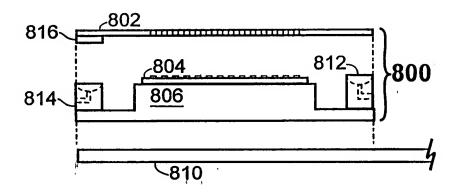
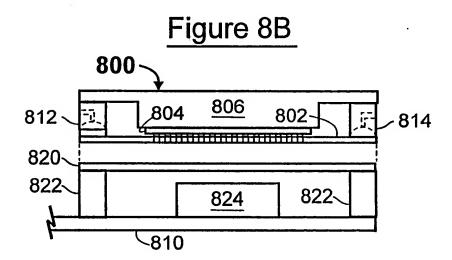
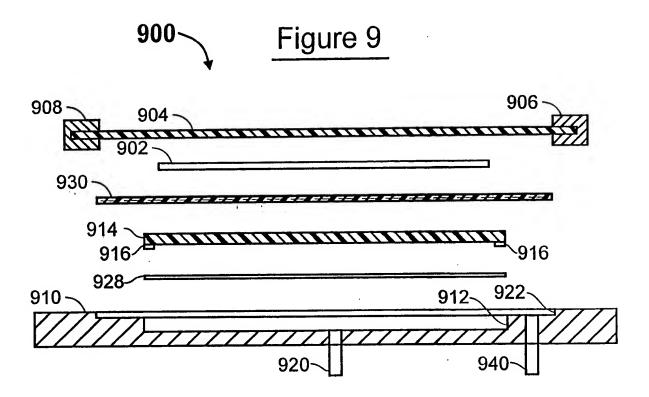
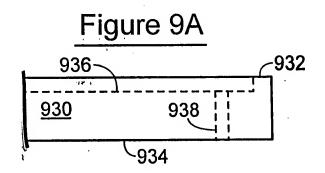



Figure 8A











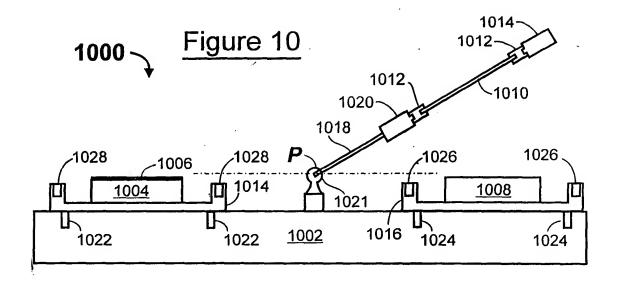

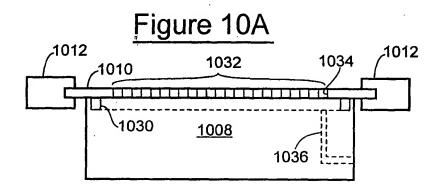

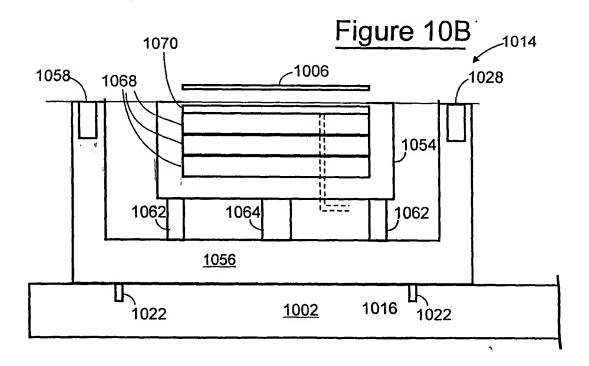

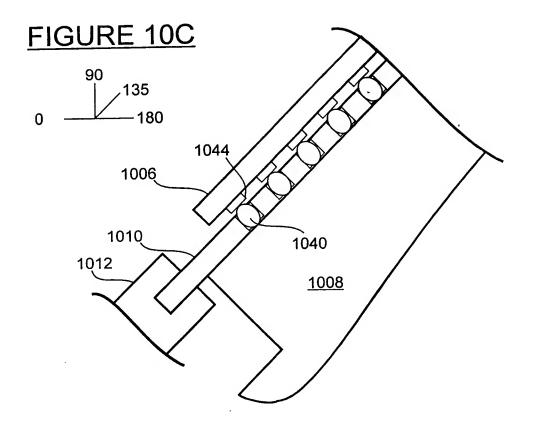


FIGURE 10D

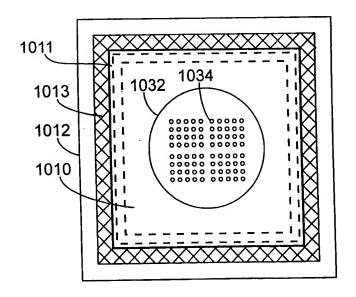


Figure 11A



Figure 11B

